

## Stick-A-Switch™ (Model SS15A) Installation and operating instructions

The SS15A works with the RR501 (part of the RC5000) and the TM751 (part of the RC6500). It lets you turn on and off three individually coded X10 Modules and brighter and dim lights connected to Lamp Modules and Wall Switch Modules. In the default state (after first firing the battery) the SS15A is set to Housecode A. The top three ON-OFF rocker keys control modules set to Unit Codes 1, 2, & 3. The bottom rocker key brightens and dims lights connected to Lamp and Wall Switch Modules.

1. Plug in an X10 Transceiver (RR501 or TM751, sold separately)
2. To turn on or off X10 Modules set to Unit Codes 1, 2, or 3 on Housecode A: press the left or right side of the first, second or third rocker key. To brighten or dim Lamp Modules or Wall Switch Modules: press the number bar on first, then press and hold the left or right side of the bottom rocker key. Attach the SS15A to a wall using double sided tape or Velcro™. If you want to control Modules 1, 2 and 3 on Housecode A, that's it. You don't need to read any further.

### To change the Housecode


- Press and hold the first (top) ON rocker key. The green LED flashes. 3 seconds later, the LED blinks the current setting: 1 blink for Housecode A, 2 blinks for B, ... 16 blinks for P.
- Release the first (top) ON rocker key.
- Press and release the first (top) ON rocker key the appropriate number of times for the House Code you want to set. Once for A, twice for B, etc. The LED blinks for each press. **IMPORTANT:** Hold the button on your last press. 3 seconds later, the red LED blinks back the new setting, e.g. 3 blinks for Housecode C. If you do not follow this programming sequence, the LED will stay on for 1 second and your existing setting will not be changed.

**To change the Unit Code for the first (top) rocker key** (the second and third rockers are always one # higher than the first): i.e. if you set the first rocker key to 6, the second rocker key controls 7, and the third controls 8, etc.

- Press and hold the top OFF rocker key. The red LED flashes. 3 seconds later, the LED blinks the current setting: 1 blink for Unit Code 1, 2 blinks for 2, ... 16 blinks for 16.
- Release the top OFF rocker key.
- Press and release the top OFF rocker key the appropriate number of times for the Unit Code you want. **IMPORTANT:** Hold the key on your last press. 3 seconds later the new code blinks back. If you do not follow this programming sequence, the LED will stay on for 1 second and your existing setting will not be changed.

**To change battery:** open battery holder and fit a CR2032 Lithium 3V battery. Observe polarity.

**F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

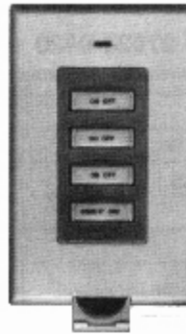

- LED, green when you press On or Bright, red when you press Off or Dim.
- Press left side to turn on, right side to turn off modules set to Unit Codes 1, 2, and 3 on Housecode A (the default setting).
- Then press and hold left side to brighten or right side to dim.
- Replace battery with CR2032, 3V lithium type

### X10 (USA) INC. LIMITED 1-YEAR WARRANTY

X10 (USA) Inc. warrants X10 products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase at retail. X10 (USA) Inc. agrees to repair or replace, at its sole discretion, a defective X10 product if returned to X10 (USA) Inc. within the warranty period and with proof of purchase.

If service is required under this warranty:

1. Return the defective unit postage prepaid to X10 (USA) Inc. (see address on back)
2. Enclose a check for \$4.00 to cover postage and handling.
3. Enclose a dated proof of purchase.
4. X10 is not responsible for shipping damage.  
Units to be returned should be packed carefully.
5. For additional warranty information, contact X10 (USA) Inc.

Your Name .....

Address .....

Date Purchased ..... 19..... Store where purchased .....

SS15A 1999

FROM

**X10 (USA) Inc.**

**91 Ruckman Rd., Box 420, Closter, NJ 07624-0420**

First Name

Last Name

Street Address - No P.O. Box numbers (for U.P.S.)

City

State

Zip

CONTENTS - MERCHANDISE

RETURN POSTAGE GUARANTEED

POSTMASTER, THIS PARCEL MAY BE OPENED FOR POSTAL INSPECTION

**X10 (USA) Inc.**

**91 Ruckman Rd., Box 420,  
Closter, NJ 07624-0420**

**Mini Timer MT522/MT10A**

A Controller, Timer and Alarm Clock all in one! Programs up to 4 modules to go on and off at specific times twice a day. Controls 8 modules instantly. Dims lights too.

**Maxi Controller SC503**

Lets you control up to 16 X10 Modules at the touch of a button from anywhere in the house. Dims lights too!

**Mini Controller MC460**

Lets you control up to 8 X10 Modules at the touch of a button from anywhere in the house. Dims lights too!

**2-Way Home Control Interface CM11A**

Set up from an IBM compatible PC to control up to 256 X10 Modules. ActiveHome software & cable included.

**Thermostat Set-Back TH2807**

Automatically sets-back your central heating/air conditioning. Mounts on the wall under your existing thermostat and plugs into an Appliance Module.

**Telephone Responder TR16A**

Lets you control up to 10 lights and appliances from any outside touch tone phone.

**Wireless Remote Control System RC5000**

Lets you control 16 X10 modules from inside or outside your home. Can also dim and brighten Lamp Modules and Wall Switch Modules. Works with the HR12A PalmPad Remote and X10 RF Wall Switch (SS13A/SS15A).

**Lamp Module LM465**

Can be Dimmed and Brightened from any X10 Controller. Responds to "All lights on". Rated for 300 W Incandescent only. 2-Way version LM46A.

**Appliance Module - AM486/AM466**

Two pin polarized (AM486) or 3 pin grounded (AM466). For controlling an air conditioner, TV, stereo, etc. anywhere in the home. Rated 15A for heaters, coffee pots etc.; 1/3 H.P. for motors, 400W for TVs, 500W for lamps. 2-Way versions available AM46A (2 pin), AM46A (3 pin).

**Wall Switch Module WS467**

For controlling important indoor and outdoor security lights. Replaces your existing wall switch and installs like a regular dimmer. Dimmed/brightened from any X10 Controller. Rated 500W incandescent only.

**3-Way Wall Switch Module WS4777**

For controlling a light which is controlled by two switches. Same features as WS467.

**Split Receptacle Module SR227**

Replaces existing wall outlet. The top outlet functions like an Appliance Module, the bottom one is a regular outlet. Rated 15A. Controls ANYTHING which normally plugs into a regular AC outlet.

**Universal Module UM506**

Isolated contact relay and keeper. Can be set for momentary or continuous operation. Not compatible with DS7000 and DC8700 security systems.